




INSTALLATION GUIDE

(WE KNOW YOU DON'T REALLY NEED IT)

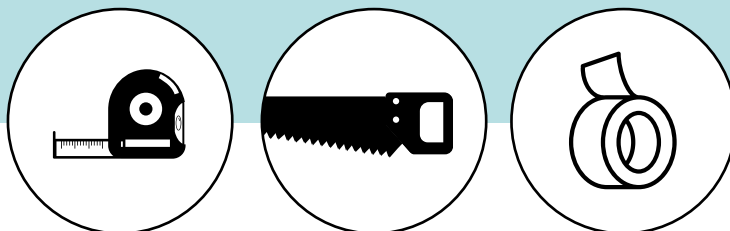

justwooddecor.com

Installation instructions for JustWood interior wall covering



PRECAUTIONS

Always wear work gloves and safety glasses when cutting the product. Read the instructions and product warranty documents carefully before beginning installation.

REQUIRED TOOLS


- Measuring tape
- Circular saw or table saw
- Chalk line or laser level

PREPARE THE SURFACE

Clean and dry the surface thoroughly before decorating. For drywall, cover with a coat of paint or primer. If the wall was painted recently, make sure it is completely dry.

HORIZONTAL INSTALLATION

Make all measurements, pattern tests, and cuts before removing the protective film from the adhesive strip. Once the film is removed, do not touch the adhesive and protect it from dust.

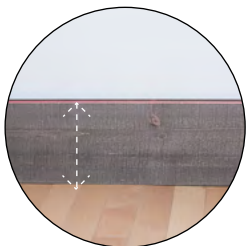

Step 1

Measure a distance of **7 1/16 inches (17.94 cm)** from the base of the wall. Draw a straight line using the chalk line or laser level. If the floor is not level, raise the reference line a little to ensure the installation is straight. The gap can be hidden by a baseboard.

Step 2

Position the board beneath the line. Once you have determined the proper position, peel back the protective film from the adhesive tape at a corner of the board and align the outward-facing surface of the board with the reference line. Place the board into position, peel back the rest of the protective film, and press firmly on the board. It is important to apply sufficient and uniform pressure for maximum adhesion. If the wall is uneven, the base of the board may have to be nailed. Two nails on either edge of the board should be all it takes. **ATTENTION: Never drive nails into the tongue and groove.**

Step 3

Still following the reference line, repeat step 2 to finish the first row. The last board of every row will probably need to be trimmed. It is important to start the next row with the cut section of board to stagger the joints.

This product was designed for use on flat surfaces. Nails may be required for use on highly uneven surfaces. In very damp areas wood should be treated with a surface sealer.

This product was not designed to hide major wall imperfections.



Step 4

Continue installing the boards row by row, using the row below for guidance. Be sure to lock the tongues and grooves into place correctly.

Step 5

For the last row, measure the remaining space. Using a circular saw or table saw, cut the boards lengthwise to finish the wall. Secure the board in place with finishing nails at either edge if necessary.

PAINTS, STAINS, AND VARNISHES

Although this product is prefinished, you can vary the colours by using different finishes. The product can be painted, stained, or varnished to accentuate the textures or add a personal touch.

Ideas for applications:

- Ceiling
- Headboard
- Kitchen islands and cupboards
- Back plates
- Crafts, decorated chalkboard, etc.



WATCH THE INSTALLATION VIDEO AT
JUSTWOODDECOR.COM